



CP0365

**FITTING INSTRUCTIONS FOR CP0365BL CRASH PROTECTORS**  
**YAMAHA MT 07 2014-**



PICTURE A



PICTURE B




PICTURE C

**THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.**  
**DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.**

**Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike**

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

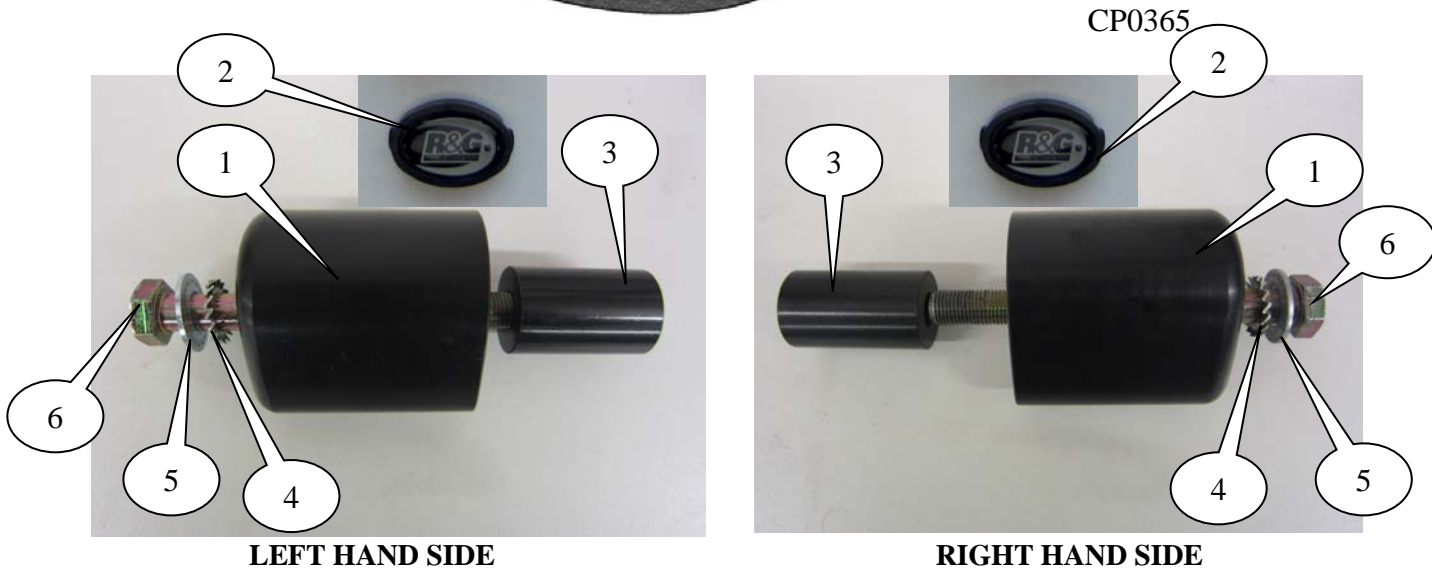

**TOOLS REQUIRED**

- Socket set to include 17 and 19mm sockets and wrench.
- Torque wrench (up to 40 Nm).


**LEGEND**

- ITEM 1 = B0061 with CS340 (12mm) (CRASH PROTECTORS) (x2).
- ITEM 2 = BC0002 CRASH PROTECTOR CAPS (x2).
- ITEM 3 = S0391 SPACERS (48mm LONG) (x2).
- ITEM 4 = LW0001 ( SHAKE PROOF WASHERS) (x2).
- ITEM 5 = M12 PLAIN WASHERS (x2).
- ITEM 6 = M12x1.25x120mm LONG HEX HEAD BOLT (x2).

**FITTING INSTRUCTIONS**



PICTURE 1

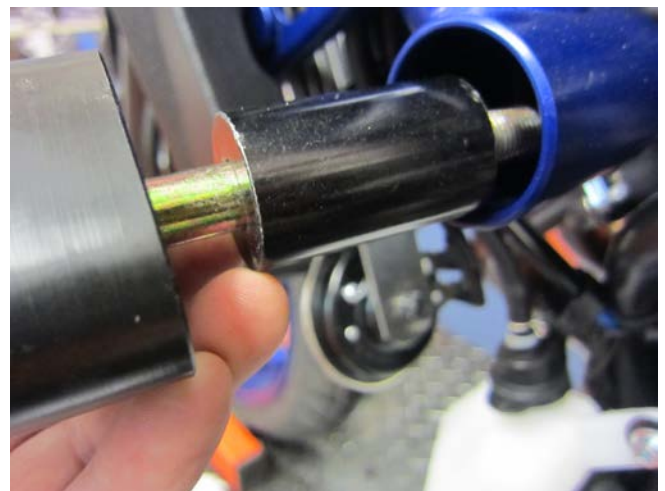

PICTURE 2




CP0365

### **Left Side (as you sit on bike)**

- Remove the engine bolt on the left hand side of the bike, as arrowed in picture 1.
- Slide one of the 12mm washers (item 5) onto the M12x120mm long hexagon headed bolt (item 6) so the washer sits against head of bolt.
- Slide serrated locking washer (item 4) over the bolt so it sits against washer just fitted.
- Next slide the bolt with washers through either crash protector (item 1) so head of bolt and washers goes into counter-bore in bobbin.
- Slide one of the spacers (item 3) over the exposed end of the bolt against the crash protector as shown in picture 2.
- Offer the crash protector and spacer assembly up to the frame mount and begin to tighten the bolt as shown in picture A and 2.
- Tighten the bolt until you feel some compression from inside the protector using 19mm socket and wrench. **PLEASE NOTE THE CRASH PROTECTOR MUST BE POSITIONED AS IN PICTURE 'C' WITH BIGGER END TOWARD FRONT OF BIKE.** Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. **Tighten to 40Nm of torque (do not exceed this figure, as damage can occur to the motorcycle and the bolt).**
- If not already fitted fit bubble stickers into recess of both crash protector caps.
- Fit crash protector caps (item 2) into both crash protectors.



PICTURE 3

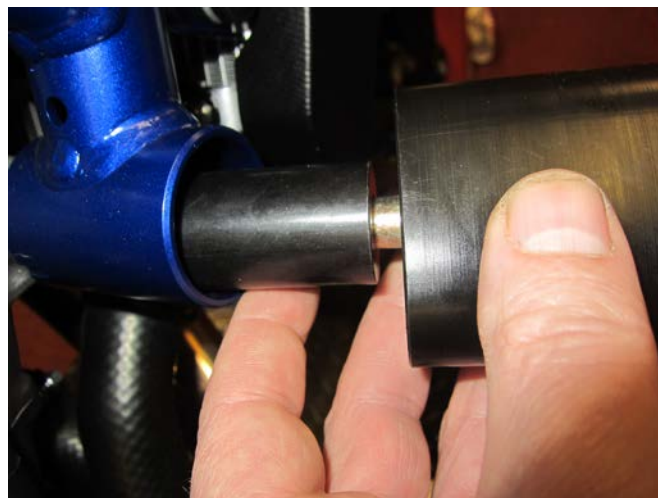

PICTURE 4

### **Right Side (as you sit on bike)**

- Remove the engine bolt on the right hand side of the bike, as arrowed in picture 3.
- Slide one of the 12mm washers (item 5) onto the M12x120mm long hexagon headed bolt (item 6) so the washer sits against head of bolt.
- Slide serrated locking washer (item 4) over the bolt so it sits against washer just fitted.
- Next slide the bolt with washers through either crash protector (item 1) so head of bolt and washers goes into counter-bore in bobbin.
- Slide one of the spacers (item 3) over the exposed end of the bolt against the crash protector as shown in picture 4.



CP0365

- Offer the crash protector and spacer assembly up to the frame mount and begin to tighten the bolt as shown in picture B and 4.
- Tighten the bolt until you feel some compression from inside the protector using 19mm socket and wrench. **PLEASE NOTE THE CRASH PROTECTOR MUST BE POSITIONED AS IN PICTURE 'C' WITH BIGGER END TOWARD FRONT OF BIKE.** Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. **Tighten to 40Nm of torque (do not exceed this figure, as damage can occur to the motorcycle and the bolt).**
- If not already fitted fit bubble stickers into recess of both crash protector caps.
- Fit crash protector caps (item 2) into both crash protectors.

#### **GENERAL TORQUE SETTINGS**

M4 BOLT = 8Nm  
M5 BOLT = 12Nm  
M6 BOLT = 15Nm  
M8 BOLT = 20Nm  
M10 BOLT = 40Nm

Issue 2 26/08/2016 (NSY)

#### **CONSUMER NOTICE**

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

#### **R&G RACING RETURNS POLICY (NON-FAULTY GOODS)**

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.





CP0365

**INSTRUCTIONS DE MONTAGE POUR CP0365BL PROTECTIONS CRASH**  
**YAMAHA MT 07 2014-**



PHOTO A



PHOTO B



PHOTO C

LE KIT CONTIENT LES ARTICLES EXPOSES CI-DESSOUS, VERIFIER QUE TOUTES LES PIECES SOIENT PRESENTES AVANT DE PROCEDER AU MONTAGE.


**La façon dont le kit est emballé ne correspond pas forcément à la façon de monter les pièces sur la moto**

Notez que si les kits sont emballés avec des rondelles en caoutchouc servant à tenir les composants, *ces rondelles doivent être jetées.*


**LES PARTIES PRESENTES PEUVENT ETRE UNIQUEMENT REPRESENTATIVES (POUR LA CLARTE DES INSTRUCTIONS UNIQUEMENT).**



CP0365

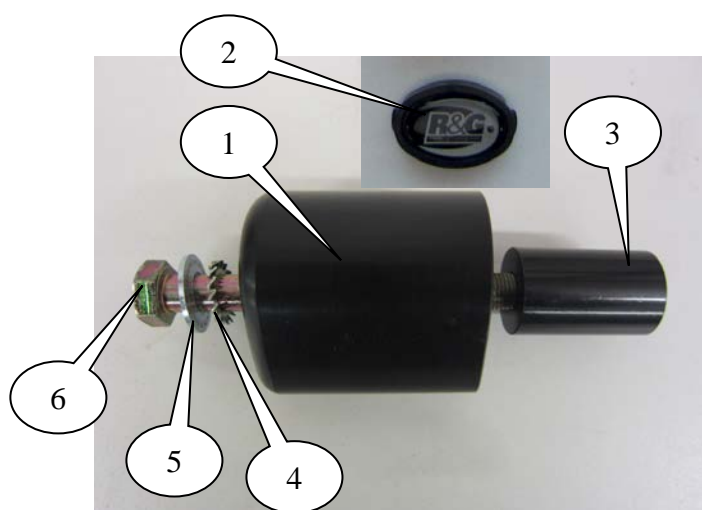

Coté gauche

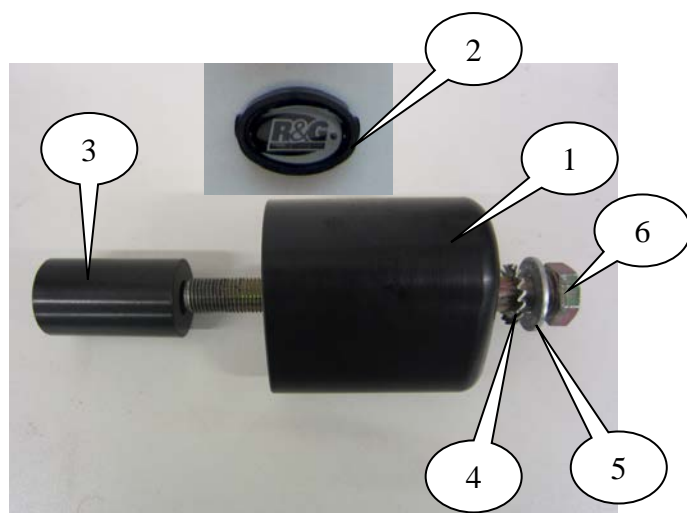

Coté droit

**Outils requis**

- Clés à douille 17 et 19mm.
- Clé dynamométrique (à 40 Nm).

**LEGENDE**

ARTICLE 1 = B0061 avec CS340 (12mm) (PROTECTIONS CRASH) (x2).

ARTICLE 2 = BC0002 CAPUCHONS DE PROTECTION CRASH (x2).

ARTICLE 3 = S0391 ENTRETOISES (48mm DE LONG) (x2).

ARTICLE 4 = LW0001 (RONDELLES ANTI VIBRATION) (x2).

ARTICLE 5 = M12 RONDELLES (x2).

ARTICLE 6 = M12x1.25x120mm BOULON (x2).



CP0365

**INSTRUCTIONS DE MONTAGE :**



PHOTO 1



PHOTO 2

**Coté gauche (assis sur la moto)**

- Enlever le boulon moteur du coté gauche de la moto (photo 1).
- Glisser une des rondelles 12mm (article 5) sur le boulon M12x120mm (article 6) afin que la rondelle se place contre la tête du boulon.
- Glisser une rondelle de blocage (article 4) autour du boulon de façon à ce qu'elle se place contre la rondelle tout juste insérée.
- Glisser ensuite le boulon avec rondelles à travers la protection crash (article 1) pour que la tête du boulon et les rondelles aillent dans le contre alésage de la bobine.
- Glisser une des entretoises (article 3) autour de l'extrémité du boulon et contre la protection crash (photo 2).
- Mettre la protection crash en position et son entretoise en position sur le support cadre puis commencer à serrer le boulon (photo 1 et 2).
- Serrer le boulon de la protection jusqu'à ce que vous sentiez une compression de l'intérieur de la protection avec une clé de 19mm. **LA PROTECTION DOIT ETRE POSITIONNEE COMME EN "C" AVEC LE COTE ARRONDI LE PLUS GROS EN DIRECTION DE L'AVANT DE LA MOTO.** Serrer à 40Nm de couple (Ne pas excéder cette valeur, car cela pourrait endommager la moto et le boulon).
- Si cela n'est pas déjà fait, appliquez les stickers en caoutchouc dans le creux des 2 capuchons de protection crash.



CP0365



PHOTO 3

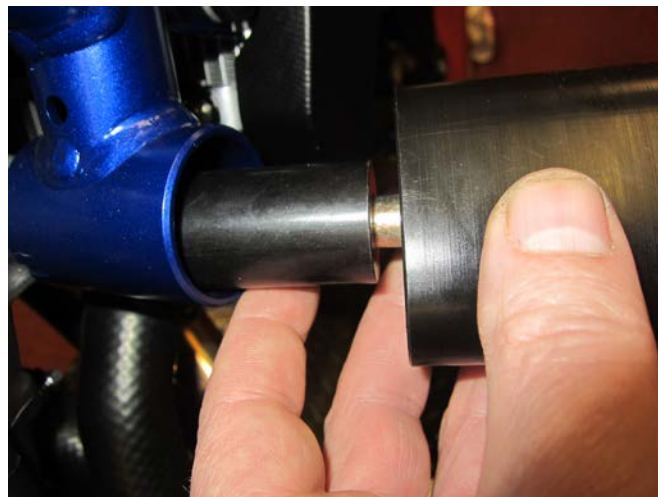


PHOTO 4

#### Coté droit (assis sur la moto)

- Enlever le boulon moteur du coté droit de la moto (photo 3).
- Glisser une des rondelles 12mm (article 5) sur le boulon M12x120mm (article 6) afin que la rondelle se place contre la tête du boulon.
- Glisser une rondelle de blocage (article 4) autour du boulon de façon à ce qu'elle se place contre la rondelle tout juste insérée.
- Glisser ensuite le boulon avec rondelles à travers la protection crash (article 1) pour que la tête du boulon et les rondelles aillent dans le contre alésage de la bobine.
- Glisser une des entretoises (article 3) autour de l'extrémité du boulon et contre la protection crash (photo 4).
- Mettre la protection crash en position et son entretoise en position sur le support cadre puis commencer à serrer le boulon (photo 2 et 4).
- Serrer le boulon de la protection jusqu'à ce que vous sentiez une compression de l'intérieur de la protection avec une clé de 19mm. **LA PROTECTION DOIT ETRE POSITIONNEE COMME EN "C" AVEC LE COTE ARRONDI LE PLUS GROS EN DIRECTION DE L'AVANT DE LA MOTO. Serrer à 40Nm de couple (Ne pas excéder cette valeur, car cela pourrait endommager la moto et le boulon).**
- Si cela n'est pas déjà fait, appliquez les stickers en caoutchouc dans le creux des 2 capuchons de protection crash.
- Monter les capuchons (article 2) sur les 2 protections crash.

Issue 1 14/03/2014 (NSY)

#### Couples de serrage recommandés

M4 BOULON = 8Nm

M5 BOULON = 12Nm

M6 BOULON = 15Nm





CP0365

M8 BOULON = 20Nm  
M10 BOULON = 40Nm

#### **CONSUMER NOTICE**

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

#### **R&G RACING RETURNS POLICY (NON-FAULTY GOODS)**

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.



CP0365

**MONTAGEANLEITUNG FÜR CP0365BL STURZPADS**  
**YAMAHA MT 07 - AB MODELL 2014**



ABBILDUNG A



ABBILDUNG B



ABBILDUNG C

**ALLE TEILE SIND UNTEN ABGEBILDET UND GEKENNZEICHNET. BEVOR SIE MIT DER MONTAGE BEGINNEN, ÜBERPRÜFEN SIE, DASS ALLE TEILE VORHANDEN SIND.**


**Hinweis: Die Verpackung der Teile stellt nicht die Reihenfolge der Montage dar.**

Hinweis für Kits mit Plastikunterlegscheiben an den Schrauben – *Diese Plastik-Unterlegscheiben werden nicht für den Einbau benötigt!*


DIE UNTEN ABGEBILDETEN TEILE DIENEN LEDIGLICH ZUR ERKLÄRUNG



CP0365

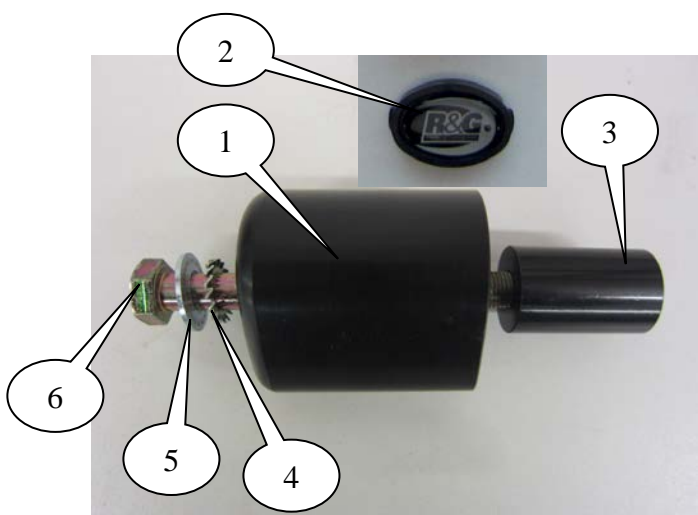

LINKE SEITE

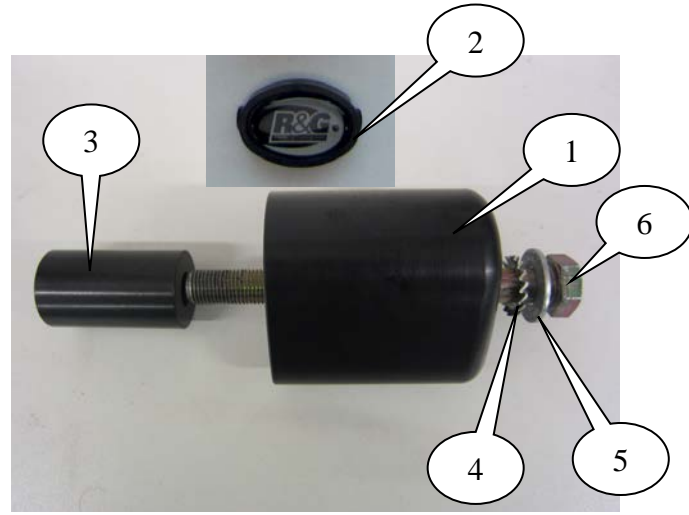

RECHTE SEITE

**SIE BENÖTIGEN FOLGENDES WERKZEUG:**

- Steckschlüsselsatz inkl. 17 und 19mm Steckschlüssel
- Drehmomentschlüssel (bis max. 40 Nm)

**LIEFERUMFANG:**

- ARTIKEL 1 = B0061 mit CS340 (12mm) (STURZPADS) (x2)
- ARTIKEL 2 = BC0002 SCHUTZKAPPEN (x2)
- ARTIKEL 3 = S0391 ABSTANDSHALTER (48mm Länge) (x2)
- ARTIKEL 4 = LW0001 (ZAHNSCHIEBE) (x2)
- ARTIKEL 5 = M12 UNTERLEGSCHIEBEN (x2)
- ARTIKEL 6 = M12x1.25x120mm SECHSKANTSCHRAUBE (x2)

**MONTAGEANLEITUNG:**





CP0365

ABBILDUNG 1

ABBILDUNG 2

### Linke Seite (in Fahrtrichtung)

- Entfernen Sie die Motorschraube auf der linken Seite des Motorrads – siehe Abbildung 1.
- Nehmen Sie eine der M12x120mm Sechskantschrauben (ARTIKEL 6) und eine 12mm Unterlegscheibe (ARTIKEL 5). Schieben Sie die Unterlegscheibe zum Schraubenkopf hoch.
- Nehmen Sie die Zahnscheibe (ARTIKEL 4) und schieben Sie sie zur Unterlegscheibe hoch.
- Als nächstes führen Sie die Schraube mit den Unterlegscheiben in eins der Sturzpad (ARTIKEL 1) ein, sodass der Schraubenkopf in die Gegenbohrung des Sturzpads reingeht.
- Schieben Sie einen der Abstandshalter (ARTIKEL 3) über das Ende der Schraube zum Sturzpad hoch – siehe Abbildung 2.
- Die Sturzpadeinheit inkl. Abstandshalter an der Rahmenhalterung anbringen und befestigen, wie in den Abbildungen A und 2 abgebildet.
- Ziehen Sie die Schraube mit einem 19mm Steckschlüssel fest, bis Sie etwas Druck vom Inneren des Sturzpads spüren. **BITTE DARAUF ACHTEN, DASS DAS STURZPAD WIE IN ABBILDUNG 'C' POSITIONIERT IST – DAS GRÖßERE ENDE DES STURZPADS ZUM VORDERTEIL DES MOTORRADS GERICHTET.** Noch etwas drehen, bis Sie merken, dass der Druck sich leicht erhöht, dann noch eine Vierteldrehung anwenden. Nicht überdrehen – dies kann zu einer Beschädigung des Motorrads führen. 40 Nm Anzugsmoment nicht überschreiten!
- Wenn noch nicht bereits montiert, montieren Sie die Bubble-Aufkleber in den Vertiefungen der Sturzpad-Schutzkappen.
- Die Schutzkappen (ARTIKEL 2) an beiden Sturzpads anbringen.



ABBILDUNG 3

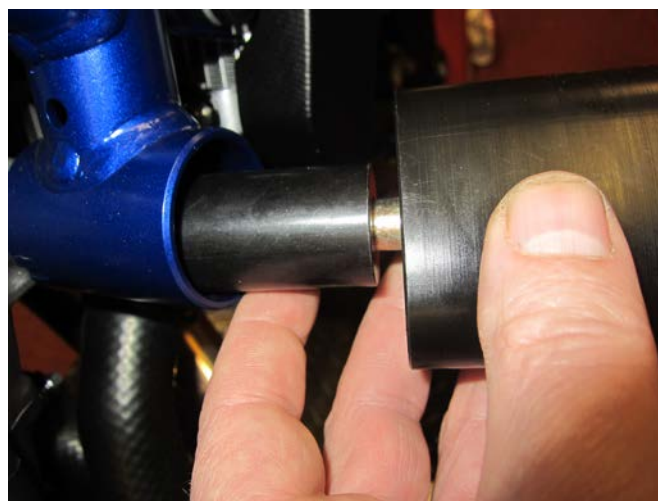


ABBILDUNG 4

### Rechte Seite (in Fahrtrichtung)

- Entfernen Sie die Motorschraube auf der rechten Seite des Motorrads – siehe Abbildung 3.





CP0365

- Nehmen Sie eine der M12x120mm Sechskantschrauben (ARTIKEL 6) und eine 12mm Unterlegscheibe (ARTIKEL 5). Schieben Sie die Unterlegscheibe zum Schraubenkopf hoch.
- Nehmen Sie die Zahnscheibe (ARTIKEL 4) und schieben Sie sie zur Unterlegscheibe hoch.
- Als nächstes führen Sie die Schraube mit den Unterlegscheiben in eins der Sturz pads (ARTIKEL 1) ein, sodass der Schraubenkopf in die Gegenbohrung des Sturz pads reingeht.
- Schieben Sie einen der Abstandshalter (ARTIKEL 3) über das Ende der Schraube zum Sturz pad hoch – siehe Abbildung 4.
- Die Sturz padeinheit inkl. Abstandshalter an der Rahmenhalterung anbringen und befestigen, wie in den Abbildungen B und 4 abgebildet.
- Ziehen Sie die Schraube mit einem 19mm Steckschlüssel fest, bis Sie etwas Druck vom Inneren des Sturz pads spüren. **BITTE DARAUf ACHTEN, DASS DAS STURZ PAD WIE IN ABBILDUNG 'C' POSITIONIERT IST – DAS GRÖßERE ENDE DES STURZ PADS ZUM VORDERTEIL DES MOTORRADS GERICHTET.** Noch etwas drehen, bis Sie merken, dass der Druck sich leicht erhöht, dann noch eine Vierteldrehung anwenden. Nicht überdrehen – dies kann zu einer Beschädigung des Motorrades führen. 40 Nm Anzugsmoment nicht überschreiten!
- Wenn noch nicht bereits montiert, montieren Sie die Bubble-Aufkleber in den Vertiefungen der Sturz pad-Schutzkappen.
- Die Schutzkappen (ARTIKEL 2) an beiden Sturz pads anbringen.

Ausgabe 1 14/03/2014 (NSY)

#### CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

#### R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.