



Follow us on social media and feel free to leave us a review!

**Kit Includes:**

1.	X1	C08061	Rubber Mudflap
2.	X1	CFK812050	Bracket
3.	X1	CFK812025B	Spacer Plate
4.	X3	CBOLM60035	M6 x 16mm Black Flanged Button Bolt
5.	X3	CWASM60001	M6 Washer
6.	X3	CNUTM60003	M6 Nyloc Nut


**OEM Parts (From the Motorcycle):**

7.	X2	OEM M8 Bolt
8.	X2	OEM M8 Washer


### Assembly Instructions

- Start by attaching the rubber mudflap to the brackets using the fittings shown in **Fig 1**. Fully tighten all three mounting points to ensure the nyloc nuts are properly engaged.
- Next, remove the OEM M8 Bolts shown in '**FIG. 2**' to gain access to the mounting points.
- Using the OEM M8 Bolts and Washers, loosely fix the Bracket to the mounting points referenced in '**FIG. 2**'
- Once the Shock Shield is in the correct position, fully tighten all fixings.

## Fig 1

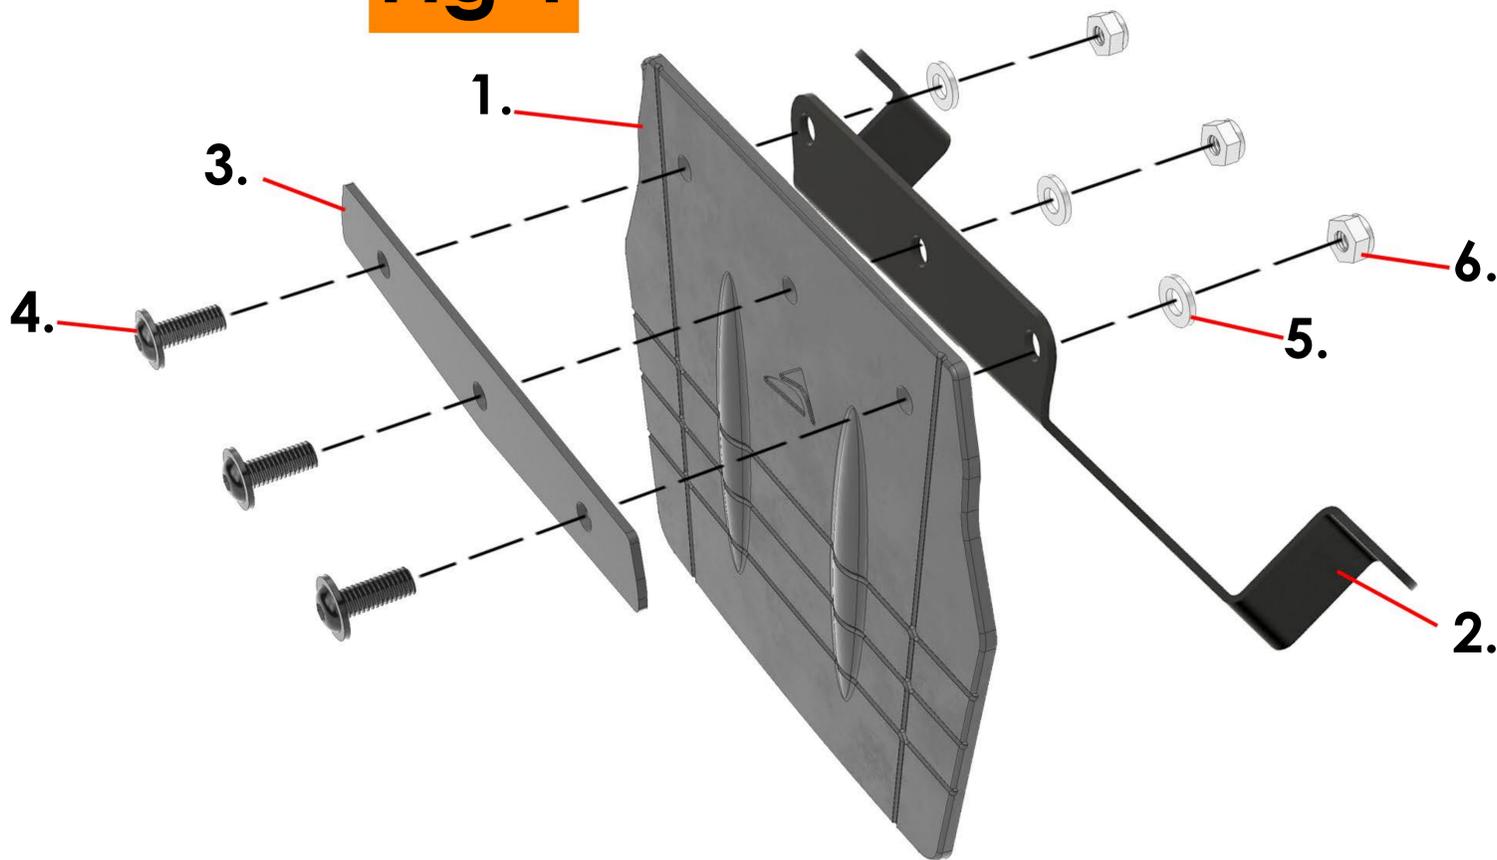

## Fig 2

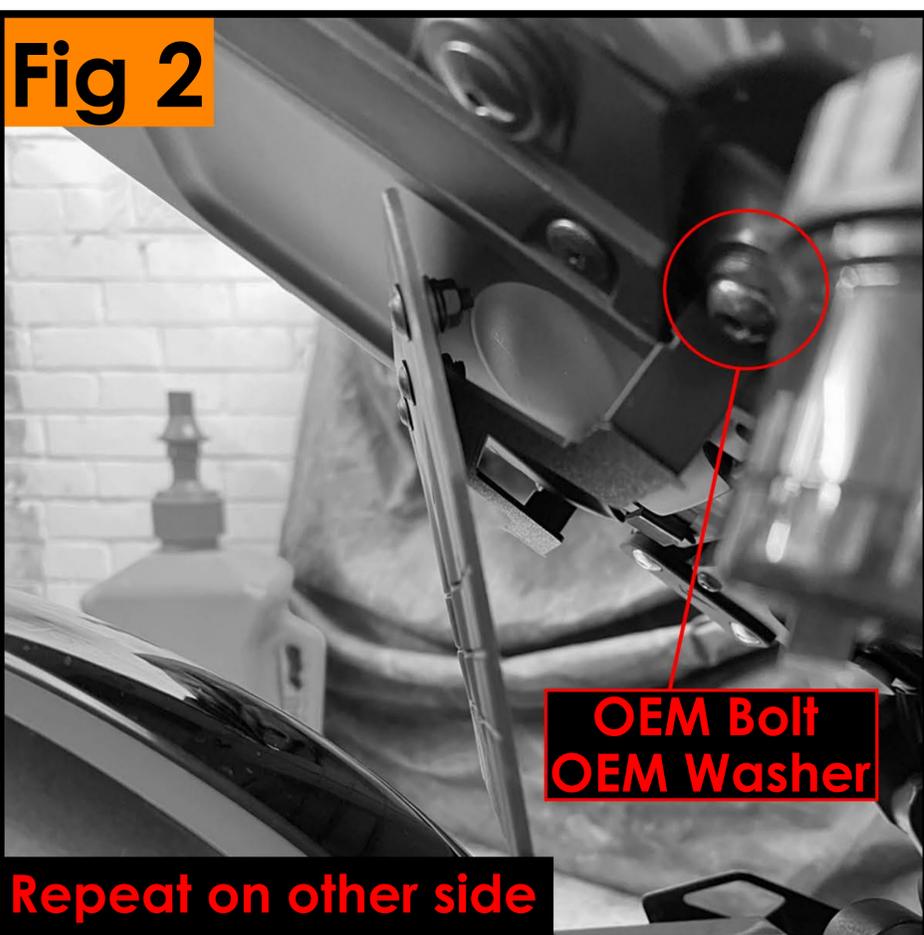

## Fig 3

