




Fitting Instructions for OCG0018BK Oil Cooler Guard
HONDA CB1100 2013



In This Kit There Should Be
1x Oil Cooler Guard (OCG0018)
2x 100mm Lengths of Foam
2x 4mm cable ties

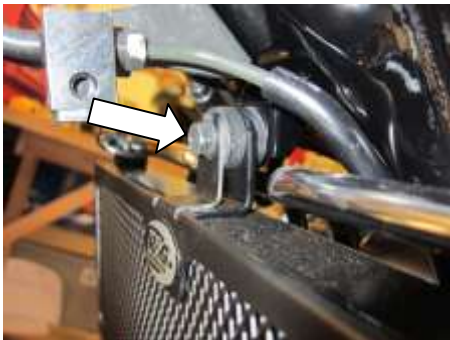

- Remove the bolt in position arrowed in the top picture.
- To fit the oil cooler guard to the bike cut the foam strips provided into 10mm wide pieces and stick them to the back of the oil cooler guard, so that they sit between the oil cooler guard and the oil cooler itself.
- Fit the oil cooler guard as shown above and secure using the original bolt and the two cable ties through slots as arrowed at the bottom of oil cooler guard as arrowed in the pictures above.

Issue 1 07/03/2013 (NSY)



CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect.

Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



Instructions de montage

OCG0018BK
Protection refroidisseur d'huile
Honda CB1100 2013



Le kit contient:

1x Protection refroidisseur d'huile (OCG0018)
2x 100mm coupes de mousse
2x 4mm attaches câbles



- Enlever les boulon positionnés comme sur la photo ci dessus.
- Pour installer la protection sur la moto, couper des bandes de mousse de 10mm chacune et collez les à la partie inférieure de la protection, de sorte à ce que ces petites mousses soient positionnées entre la protection refroidisseur d'huile et le refroidisseur d'huile lui-même.
- Installer la protection comme sur la photo ci-dessus et sécuriser en utilisant les 2 boulons d'origine et les 2 attaches câbles à travers les emplacements prévus à cet effet, comme au bas de la photo du dessus.



Montageanleitung für den OCG0018BK Ölkühlerschutz
HONDA CB1100 2013



Dieser Kit enthält:
1x Ölkühlerschutz (OCG0018)
2x 100mm Schaumstoffstreifen
2x Kabelbinder



- Entfernen Sie die Schraube, die im obersten Bild gekennzeichnet ist.
- Um den Ölkühlerschutz am Motorrad zu montieren, schneiden Sie zuerst die mitgelieferten Schaumstoffstreifen in 10 mm breiten Streifen und kleben Sie diese auf der Rückseite des Ölkühlerschutzes, so dass sie zwischen dem Ölkühlerschutz und dem Ölkühler angebracht sind.
- Montieren Sie den Ölkühlerschutz wie oben abgebildet und befestigen Sie ihn mit der Originalschraube und den zwei Kabelbindern. Die zwei Kabelbinder durch die Öffnungen unten am Kühlerschutz stecken, die auf den Bildern oben gekennzeichnet sind.

Ausgabe 1 07/03/2013 (NSY)